


Quick guide — — Overview buttons and guidance screen

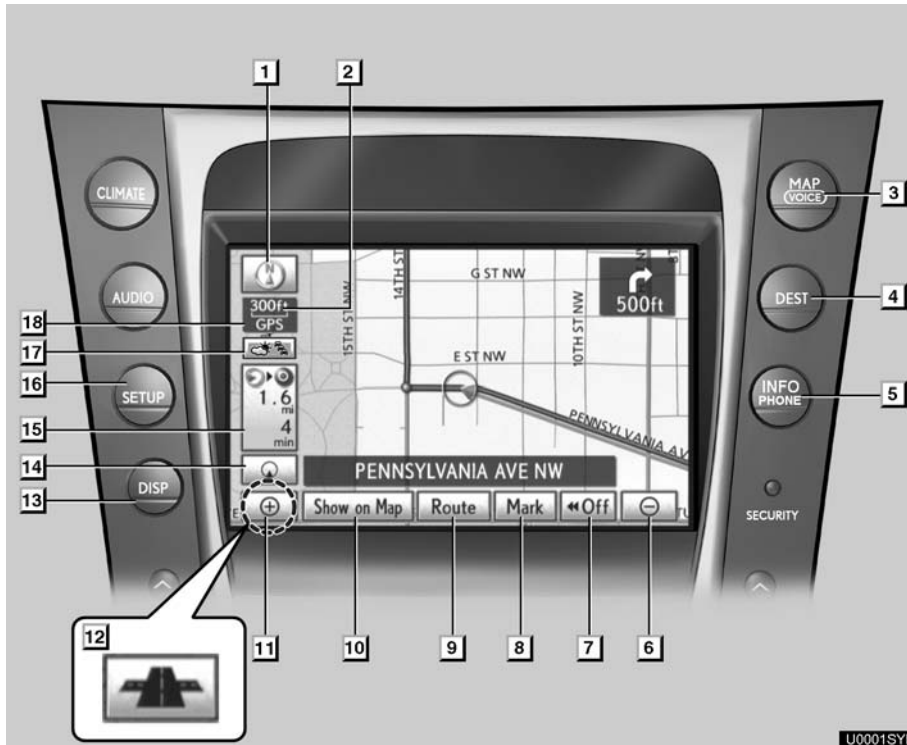

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	41
2	Scale indicator	This figure indicates the map scale.	40
3	“MAP/VOICE” button	Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position.	31
4	“DEST” button	Push this button to display the “Destination” screen.	7, 9, 11, 12, 13, 60
5	“INFO/PHONE” button	Push this button to display the “Information” screen.	16, 128, 139, 145, 152, 197
6	Zoom out button	Touch this button to reduce the map scale.	40

No.	Name	Function	Page
7	“◀◀Off”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “On▶▶” .	175
8	“Mark”	Touch this button to register the current position or the cursor position as an address book entry.	33
9	“Route”	Touch this button to change the route.	92, 94
10	“Show on Map”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	100, 149
11	Zoom in button	Touch this button to magnify the map scale.	40
12	Foot print map button	Touch this button to display the foot print map and the building information.	40
13	“DISP” button	Push this button to display the “Display” (quality control) screen.	29
14	Screen configuration button	Touch this button to change the screen mode.	37
15	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	91
16	“SETUP” button	Push this button to display the “Setup” screen. You can change the language from this screen. (See “● Selecting a language” on page 161.)	15, 108, 160, 164, 166, 170, 179, 184
17	XM® indicator	This mark is displayed when XM® information is received.	149
18	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	186

— Registering home




1 Push the “DEST” button.



2 Touch “Go Home”.

If home has not been registered, you can register it by touching “Go Home”.

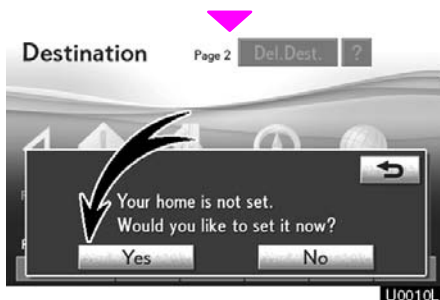


3 Touch “Yes”.



4 There are 4 different methods to search your home.

See “Destination search” on page 60.

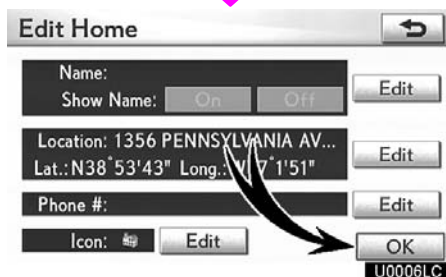

5 Touch "Enter".

The "Edit Home" screen is displayed.

6 Touch "OK".

Registration of home is complete.

You can also register home by pushing the "SETUP" button. (See "(a) Registering home" on page 109.)

You can change the name, location, phone number and icon. (See "(b) Editing home" on page 110.)

— Registering preset destinations



1 Push the “DEST” button.



2 Touch one of the preset destination buttons.

You can set a preset destination to any preset destination button that has not yet been set.



3 Touch “Yes”.



4 There are 4 different methods to search preset destinations.

See “Destination search” on page 60.



5 Touch "Enter".

The "Edit Preset Destination" screen is displayed.

6 Touch "OK".

Registration of preset destinations is complete.

You can also register preset destinations by pushing the **"SETUP"** button. (See "(a) Registering preset destinations" on page 112.)

You can change the name, location, phone number and icon. (See "(b) Editing preset destinations" on page 113.)

The registered points can be used on the "Destination" screen. (See "— Destination search by Preset destinations" on page 62.)

— Operation flow: guiding the route




1 Push the “DEST” button.




2 There are 11 different methods to search destinations.

See “Destination search” on page 60.

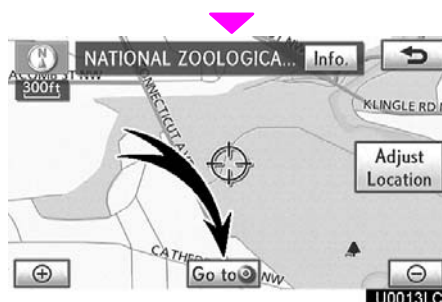

3 Touch “Go to”.

The navigation system performs a search for the route.

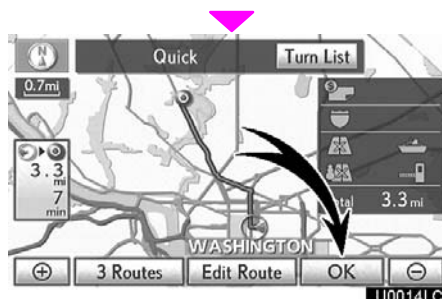

4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 81.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination




1 Push the “DEST” button.




2 Touch “Go Home”.

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 109.)

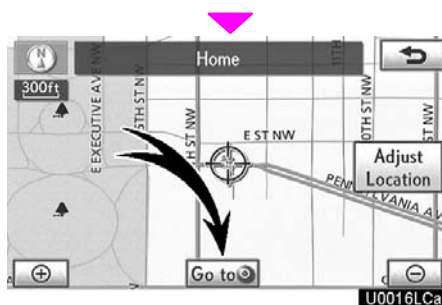

3 Touch “Go to”.

The navigation system performs a search for the route.

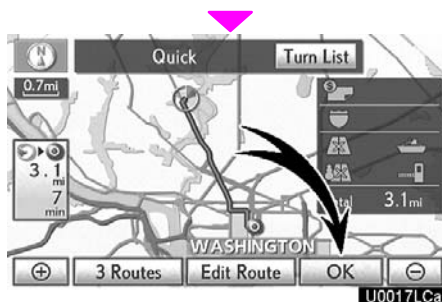

4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 81.)

5 Guidance to the destination is given via voice and on the guidance screen.